



INSTRUCTIONS – 30 AMP INSTALL KIT

This kit allows you to re-locate your Hughes Autoformer near or inside your RV's electrical compartment. This kit is for RV's with 30 amp systems.

IMPORTANT: Failure to wire as instructed may cause personal injury and could cause damage to equipment. Installation should be done by an experienced/qualified RV electrician if you do not feel comfortable attempting this yourself. These instructions will work with MOST manufactured RVs, but we cannot guarantee results.

WARNING – TURN OFF ALL A.C. POWER BREAKERS. REMOVE THE POWER CORD FROM THE PARK POWER. IF YOU HAVE AN INVERTER, TURN IT OFF.

Follow your power cord to its connection at the RV. It will be in a metal "transfer switch" box. (If your RV has a cord reel installed, its connection box may be too small for the wiring. Try to locate the transfer switch box.)

Remove the cover from the box and look carefully at the wires coming in from your cord. There are three (3) wires: #1 GREEN (GROUND), #2 WHITE (NEUTRAL), #3 BLACK (HOT).

Write down the colors associated with each of the wires. Don't take chances! The best way is to tag each wire, one at a time. Now, disconnect the wires of your cord going into the box. Remove the cord from the box.

Install the new 5 foot long cord (furnished with the kit) into the box where you removed your own power cord. The new cord is equipped with eyelets for connections under bolts. If you are using wire nuts, remove the eyelets. Attach the new wires color-for-color to the wiring in your RV. Tighten all connections. Replace the cover on the box.

Remove the cover from the receptacle (furnished with the kit). The terminals must remain with the larger (front) half of the receptacle.


Cut and strip your original cord wiring as shown. Lay this end through the opening of the receptacle. Looking at the inside of the receptacle with the cord toward you, the center GREEN screw is for the green wire. To its right is the SILVER screw for the white wire. The left screw is for the BLACK wire. To maintain correct polarity, do not switch the locations of the terminals. Tighten all connections.

At your option, attach the receptacle to the wall inside your RV's compartment. Install the cover.

To install the Hughes Autoformer, simply connect it between the new receptacle and the new 5 foot cord and turn on the breakers.

To bypass the Hughes Autoformer, just unplug it and connect the 5 foot cord directly to the new receptacle.

30 Amp Wire Stripping Guide- cut to appropriate length, strip 1/2" from each end

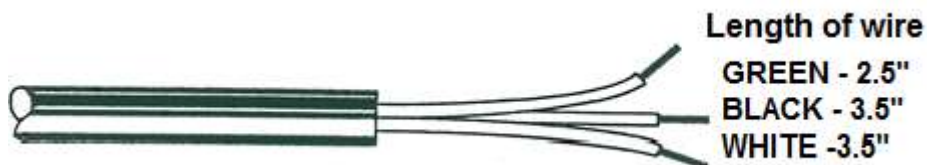

Note: These pictorial diagrams are for illustrative purposes only. Your RV may be configured differently.

