



INSTRUCTIONS – 50 AMP INSTALL KIT

Locates the Hughes Autoformer nearby or inside your RV's electrical compartment. For RV's with hard wired 50 amp cords.

IMPORTANT: Failure to wire as instructed may cause personal injury and could cause damage to equipment. Installation should be done by an experienced/qualified RV electrician if you do not feel comfortable attempting this yourself. These instructions will work with MOST manufactured RVs, but we cannot guarantee results.

WARNING – TURN OFF ALL A.C. POWER BREAKERS. REMOVE THE POWER CORD FROM THE PARK POWER. IF YOU HAVE AN INVERTER, TURN IT OFF.

Follow your power cord to its connection at the RV. It will be in a metal "transfer switch" box. (If your RV has a cord reel installed, its connection box may be too small for the wiring. Try to locate the transfer switch box.)

Remove the cover from the box and look carefully at the wires coming in from your cord. There are four (4) wires: #1 GREEN (GROUND), #2 WHITE (NEUTRAL) #3 BLACK (HOT), #4 RED (HOT).

Write down the colors associated with each of the wires. Don't take chances! The best way is to tag the wires. Now, disconnect the wires of your cord going into the box. Remove the cord from the box.

Install the new 5 foot long cord (furnished with the kit) into the box where you removed your own power cord. The new cord is equipped with eyelets for connections under bolts. If you are using wire nuts, remove the eyelets. Attach the new wires color-for-color to the wiring in your RV. Tighten all connections. Replace the cover on the box.

Remove the cover from the receptacle (furnished with the kit). Remove the knock-out that fits your original RV cord size.


Cut and strip your original cord wiring as shown. Insert this end through the opening of the furnished receptacle. Looking at the inside of the receptacle with the cord toward you, the green screw is for the GREEN wire. To its right is the silver screw for the WHITE wire. The other two brass screws are marked "X" for RED (left) and "Y" for BLACK (right). Tighten all connections.

At your option, attach the receptacle to the wall inside your RV's compartment. Install the cover.

To install the Hughes Autoformer, simply connect it between the new receptacle and the new 5 foot cord and turn on the breakers.

To bypass the Hughes Autoformer, just unplug it and connect the 5 foot cord directly to the new receptacle.

50-amp wire stripping guide

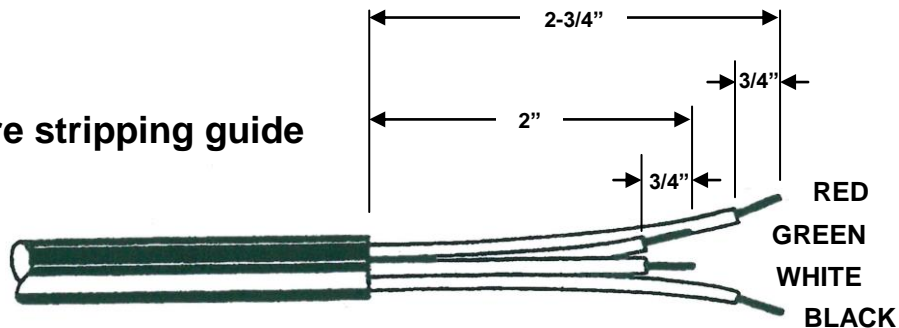

Note: These pictorial diagrams are for illustrative purposes only. Your RV may be configured differently.

